



PUMP TECHNICAL
SERVICES LIMITED

JUNG
PUMPEN

THE SUBMERSIBLE PUMP SPECIALISTS

MANUFACTURING | SALES | PROJECT DESIGN | INSTALLATION | MAINTENANCE AND REPAIRS

US

US 62

US 102

US 152

US 73 H

US 103 H

US 73

US 103

US 153

US 75

US 105

US 155

US 151

US 251

US 253

EN Instruction Manual



Type Tested
and Monitored

www.tuv.com
ID 1111219532

Pump House
Unit 12
Bilton Road Industrial Estate
Erith, Kent, DA8 2AN

01322 357 080

pts-jung.co.uk

service@pts-jung.co.uk

sales@pts-jung.co.uk

You have purchased a product made by Pentair Jung Pumpen and with it, therefore, also excellent quality and service. Secure this service by carrying out the installation works in accordance with the instructions, so that our product can perform its task to your complete satisfaction. Please remember that damage caused by incorrect installation or handling will adversely affect the guarantee.

This appliance can be used by children aged 8 years or over and by persons with limited physical, sensory or intellectual capabilities, or with limited experience and knowledge, provided that they are supervised or have been instructed in the safe use of the appliance and are aware of the dangers involved. Children must not be allowed to play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are supervised.

Damage prevention in case of failure

Like any other electrical device, this product may fail due to a lack of mains voltage or a technical defect.

If damage (including consequential damage) can occur as a result of product failure, the following precautions can be taken at your discretion:

- Installation of a water level dependent (under circumstances, mains-independent) alarm system, so that the alarm can be heard before damage occurs.
- Inspection of the collecting tank/chamber for tightness up to the top edge before – or at the latest, during – installation or operation of the product.
- Installation of backflow protection for drainage units that can be damaged by wastewater leakage upon product failure.
- Installation of a further product that can compensate in case of failure of the other product (e.g. duplex unit).
- Installation of an emergency power generator.

As these precautions serve to prevent or minimise consequential damage upon product failure, they are to be strictly observed as the manufacturer's guideline – in line with the standard DIN EN specifications as state of the art – when using the product (Higher Regional Court Frankfurt/Main, Ref.: 2 U 205/11, 06/15/2012).

SAFETY INSTRUCTIONS

This instruction manual contains essential information that must be observed during installation, operation and servicing. It is therefore important that the installer and the responsible technician/operator read this instruction manual before the equipment is installed and put into operation. The manual must always be available at the location where the pump or the plant is installed.

Failure to observe the safety instructions can lead to the loss of all indemnity.

In this instruction manual, safety information is distinctly labelled with particular symbols. Disregarding this information can be dangerous.

 General danger to people

 Warning of electrical voltage

NOTICE! Danger to equipment and operation

Qualification and training of personnel

All personnel involved with the operation, servicing, inspection and installation of the equipment must be suitably qualified for this work and must have studied the instruction manual in depth to ensure that they are sufficiently conversant with its contents. The supervision, competence and areas of responsibility of the personnel must be precisely regulated by the operator. If the personnel do not have the necessary skills, they must be instructed and trained accordingly.

Safety-conscious working

The safety instructions in this instruction manual, the existing national regulations regarding accident prevention, and any internal working, operating and safety regulations must be adhered to.

Safety instructions for the operator/user

All legal regulations, local directives and safety regulations must be adhered to.

The possibility of danger due to electrical energy must be prevented.

Leakages of dangerous (e.g. explosive, toxic, hot) substances must be discharged such that no danger to people or the environment occurs. Legal regulations must be observed.

Safety instructions for installation, inspection and maintenance works

As a basic principle, works may only be carried out to the equipment when it is shut down. Pumps or plant that convey harmful substances must be decontaminated.

All safety and protection components must be re-fitted and/or made operational immediately after the works have been completed. Their effectiveness must be checked before restarting, taking into account the current regulations and stipulations.

Unauthorised modifications, manufacture of spare parts

The equipment may only be modified or altered in agreement with the manufacturer. The use of original spare parts and accessories approved by the manufacturer is important for safety reasons. The use of other parts can result in liability for consequential damage being rescinded.

Unauthorised operating methods

The operational safety of the supplied equipment is only guaranteed if the equipment is used for its intended purpose. The limiting values given in the "Technical Data" section may not be exceeded under any circumstances.

Instructions regarding accident prevention

Before commencing servicing or maintenance works, cordon off the working area and check that the lifting gear is in perfect condition.

Never work alone. Always wear a hard hat, safety glasses and safety shoes and, if necessary, a suitable safety belt.

Before carrying out welding works or using electrical devices, check to ensure there is no danger of explosion.

People working in wastewater systems must be vaccinated against the pathogens that may be found there. For the sake of your health, be sure to pay meticulous attention to cleanliness wherever you are working.

Make sure that there are no toxic gases in the working area.

Observe the health and safety at work regulations and make sure that a first-aid kit is to hand.

In some cases, the pump and the pumping medium may be hot and could cause burns.

For installations in areas subject to explosion hazards, special regulations apply!

APPLICATION

Submersible pumps from the US series are suitable for pumping domestic waste water without stones.

When using the pumps, the relevant national laws, regulations and stipulations must be adhered to, for example:

- Domestic contaminated and waste water (e.g. EN 12056 in Europe)
- Installation of low voltage systems (e.g., VDE 0100 in Germany)

For non-standard utilisation conditions, further regulations must be observed (e.g. VDE 0100 in Germany, part 701: bathrooms and shower rooms; part 702: swimming pools and fountains and part 737: outdoor use).

Where no explosion protection is stipulated for the pumping of foul wastewater at the installation location, US 75, US 105, US 155 may also be used.

Modes of operation

with the pumped medium at a temperature of 104°F (40°C) or 194°F (90°C) in the case of HE and HES hot water pumps:

Motor submersed: continuous operation S1

Motor at the surface: short duration operation S2; see "Technical Data"

Motor at the surface; intermittent operation S3; see "Technical Data"

The submersible pump is frost-resistant down to -20°C when stored in dry conditions. When installed, however, it must not be allowed to freeze in the water.

Transport

The pump must always be lifted by the handle and never by the power supply cable! The pump should only be lowered into deeper chambers or pits using a rope or chain.

ELECTRICAL CONNECTION

NOTICE! Only qualified electricians may carry out electrical works to the pump or the controls.

WARNING!

The pump must only be connected to outlets that are installed according to specifications and are protected with at least 10 A (slow) and FI-safety switches (30mA).

WARNING!

Before carrying out any works: disconnect the pump and the controls from the mains and take steps to ensure that it cannot be energized again.

The relevant standards (such as EN standards), country-specific regulations (such as VDE in Germany), and the regulations of the local power supply companies must be observed.

NOTICE! Never put the mains plug or a free lead end in water!

If water gets into the plug, this can cause malfunctions and damage.

Observe the operating voltage (see the type plate)!

The pump is provided with a winding thermostat. In case of unacceptably high temperatures it switches off the pump to protect it against possible damage. Unacceptably high temperatures may result e.g. from dry running or mechanical or electrical overload.

CAUTION!

The pump is switched on again automatically after cooling down - risk of injury!

For this reason, always disconnect the device from the mains before remedying the fault! In order to do this, unplug the pump from the mains supply or remove the pre-fuses of the pump controls!

US 62 to US 105

Observe the operating voltage (see the type plate)! Only connect the pump to sockets that have been installed properly in accordance with the regulations and are fitted with a 16 A (delay) fuse.

Pumps without built-in level control can also be operated automatically through the use of our level controls. Our ready to connect level controls can be installed without specific electrotechnical skills.

US 151 to US 253

Observe the operating voltage (see the type plate)! Only connect the pump to sockets that have been installed properly in accordance with the regulations and are fitted with a 16 A (delay) fuse.

The pump must only be operated with the standard motor protection plug. Models without motor protection plug must only be operated using the level controls with integrated motor protection that are approved by JUNG PUMPEN. These pumps must be connected by a qualified electrician.

The overload protection (only for D and DS) must be set to the nominal current of the pump (see type plate). If the motor protection plug or the level control require to be opened in order to reset or set the overload protection, this must only be done by a qualified electrician!

If there is a blockage in the pump, the overload protection may be triggered. After rectifying the fault the "reset" button on the motor protection plug must be pressed to switch the pump on again. Pumps which are operated with a separate level control have the overload protection in the level control.

Rotational direction

The rotational direction must be checked before installation! If the rotational direction is correct, the start-up jolt should be in the opposite direction to the rotational direction arrow on the motor housing. The wrong rotational direction is also indicated if the pump performs inadequately when installed, or if loud noises can be heard during operation. If the rotational direction is wrong, 2 phases of the supply cable must be swapped over.

CAUTION!

The start-up jolt can be very forceful.

INSTALLATION

The pump must be installed as shown in the examples. For installations in accordance with EN 12056-4, the pressure pipe must be laid in a loop above the local backflow level and protected with a backflow prevention valve.

A correspondingly larger diameter pipe should be used for longer pressure pipelines to avoid pipe friction losses.

In contrast to pumps with built-in level control, the ON and OFF switching heights of pumps without built-in level control are variable by the use of a separate level control.

Permanent venting of the ring housing may be necessary if the pump runs dry from time to time (pressure outlet surfaced). This can occur for example if the residual water in the collecting chamber evaporates or if the pump runs in "snore" mode during the test run.

To vent the pump housing on pumps US 151, US 251 and US 253 the pressure pipe must be drilled above the pressure outlet to provide a 6 mm drill-hole. On all other pumps, the M8 hexagon socket screw under the (brass) oil screw must be removed.

NOTICE! If the pump is malfunctioning, part of the contents of the oil reservoir could escape into the pumping medium.


Dimensions of sump

Single installation with pump base: 40 x 50 cm

Single installation with guide rail system: 40 x 70 cm

Duplex installation: 70 x 70 cm


Example of installation with guide rail system for pumping stations at a permanent location.

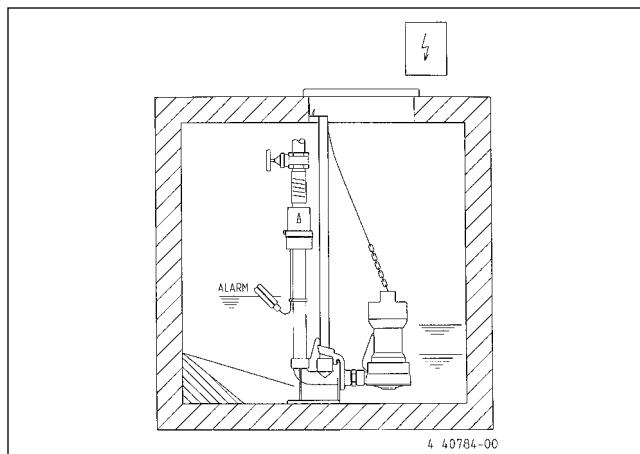

Installation: Fix the coupling base firmly to the floor of the collection chamber using wall plugs and then mount the guide rail. Next, install the pressure pipe including the necessary fittings, such as the non-return valve and shut-off valves.

Finally, fit the pump with the screwed-on coupling catch onto the guide rail and lower it into place using a chain fixed to the handle.

Example of installation with pump base

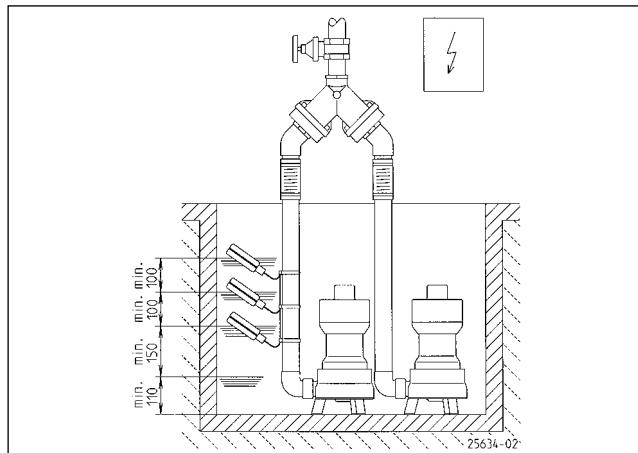

NOTICE! The floats of the level control and alarm system are installed so that they are freely movable but not under the inlet. Please observe the minimum distances. The controls must only be installed in a dry and well ventilated room!


Mobile operation

For safety reasons, mobile operation is only allowed vertically and with a foot strainer. In the case of pumps without a standard foot strainer, a separate foot strainer must be ordered and fitted under the pump in place of the three base feet.

If a hose is used as a pressure line, care must be taken to ensure that for every pumping operation the hose is completely empty before the pump is submersed. Any residual liquid would obstruct the ventilation of the pump housing and therefore also hinder the pumping operation. For the same reason, the pump would not operate if it was switched on before being submersed.

Flushing device

(not applicable for US 151 and US 251). The pump can keep the intake section at the bottom of the chamber clear of deposits to a large extent if you carry out a small modification. This reduces the performance of the pump only insignificantly.

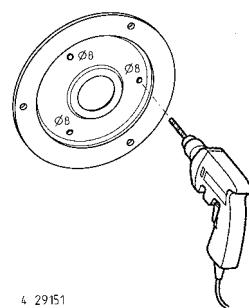

This modification is carried out as follows:

Detach the foot strainer or the 3 base feet and remove the cover. Carefully drill a hole into the 3 markings with the ø 8 symbols. Deburr the drill-holes. Re-attach the cover with the round sealing ring and the foot strainer or base feet.

MAINTENANCE

Maintenance and inspection of this product must be carried out in accordance with EN 12056-4. To ensure continued reliability of service, we recommend that you take out a service contract.

WARNING!

Before carrying out any works: disconnect the pump and the controls from the mains and take steps to ensure that it cannot be energized again.

WARNING!

Check the mains cable for signs of mechanical and chemical damage. Damaged or kinked cables must be replaced by the manufacturer.

NOTICE! When using a chain to lift the pump, please observe the relevant national regulations regarding accident prevention. Lifting gear must be checked regularly by an expert in accordance with the legal regulations

Oil check

The oil reservoir is sealed on the outside with a brass screw. In order to check the mechanical seal, the oil, including any residue, must be drained from the oil reservoir and collected in a clean measuring container.

- If the oil is contaminated with water (milky), an oil change must be carried out. Check again after a further 300 operating hours, but at the very latest after 6 months!
- However, if the oil is contaminated with both water and pollutants, then not only the oil must be replaced, but the mechanical seal as well.

For monitoring the oil reservoir, it is also possible to retrofit the electrode of our "DKG" seal leak control device in place of the brass screw on the oil reservoir.

Changing the oil

To ensure operational reliability, the first oil change should be carried out after 300 operating hours, with further oil changes carried out after every 1000 operating hours.

If the number of operating hours is very low, an oil change should still be carried out at least once a year.

If wastewater with strongly abrasive constituents is being pumped, the oil changes should be carried out at correspondingly shorter intervals.

Use HLP hydraulic mineral oil, viscosity class 22 to 46, e.g. Mobil DTE 22, DTE 24, DTE 25, to replace the oil in the oil reservoir.

The quantity of oil required is 700 cm³ for the US 253, 500 cm³ for the US 251 and US 251 and 300 cm³ for all other US pumps.

NOTICE! The oil reservoir must only be filled with the specified quantity of oil. Overfilling will result in the pump being rendered

inoperable.

Cleaning

The foot strainer prevents coarse impurities from entering the pump. Regular cleaning of the float and the foot strainer ensures optimum performance and operation.

To clean the impeller in the event of an obstacle or blockage, the hexagon socket screws on the underside of the pump must be removed and the foot strainer or cover must be levered off. On pumps with a 10 mm free passage, the wear plate must be removed. The impeller can now be cleaned.

CAUTION!

Worn impellers can have sharp edges.

Tightening torque M_A for A2 screw materials

for M 6 M_A = 8 Nm

for M 8 M_A = 20 Nm

for M 10 M_A = 40 Nm

for M 12 M_A = 70 Nm

QUICK TIPS FOR REMEDYING FAULTS

Pump does not work

- Check mains current (do not use a pin gauge)
- Fuse faulty = may be too weak (please refer to Electrical Connection)
- Mains supply cable damaged = repair to be carried out by manufacturer only

Pump runs but does not pump

- Empty the pressure pipe or hose to allow the non-return valve to open and the air to escape from the pump housing.

Impeller blocked

- Solids and fibrous matter have become lodged in the pump housing = clean

Decreased pumping performance

- Pump housing obstructed = clean
- Impeller worn = replace
- Wrong direction of rotation (for a three-phase current) = ask a qualified electrician to change 2 phases of the supply line

**EU-Konformitätserklärung**

EU-Prohlášení o shodě

EU-Overensstemmelseserklæring

EU-Declaration of Conformity

EU-Vaatimustenmukaisuusvakuutus

EU-Déclaration de Conformité

EU-Megfeleőségi nyilatkozat

EU-Dichiarazione di conformità

EU-Conformiteitsverklaring

EU-Deklaracija zgodnosti

EU-Declarație de conformitate

EU-Vyhľásenie o zhode

EU-Försäkran om överensstämmelse

DE - Richtlinien - Harmonisierte Normen
CS - Směrnice - Harmonizované normy
DA - Direktiv - Harmoniseret standard
EN - Directives - Harmonised standards
FI - Direktiivi - Yhdenmukaistettu standardi

FR - Directives - Normes harmonisées
HU - Irányelv - Harmonizált szabványok
IT - Direttive - Norme armonizzate
NL - Richtlijnen - Geharmoniseerde normen
PL - Dyrektywy - Normy zharmonizowane

RO - Directivă - Norme coroborate
SK - Smernice - Harmonizované normy
SV - Direktiv - Harmoniserade normer

• 2006/42/EG (MD) EN 809:1998/AC:2010, EN ISO 12100:2010, EN 60335-1: 2012/A13:2017**• 2011/65/EU (RoHS)****• 2014/30/EU (EMC)**

EN 55014-1: 2017/A11:2020, EN 55014-2:1997/A2:2008, EN 60034-1: 2010/AC: 2010

EN 61000-3-2:2014, EN 61000-3-3:2013

JUNG PUMPEN GmbH - Industriestr. 4-6 - 33803 Steinhagen - Germany - www.jung-pumpen.de

DE - Wir erklären in alleiniger Verantwortung, dass das Produkt den aufgeführten Richtlinien entspricht.

CS - Prohlašujeme na svou výlučnou odpovědnost, že výrobek odpovídá jmenovaným směrnicím.

DA - Vi erklærer under ansvar at produktet i overensstemmelse med de retningslinjer

EN - We hereby declare, under our sole responsibility, that the product is in accordance with the specified Directives.

FI - Me vakuutamme omalla vastuullamme, että tuote täyttää ohjeita.

FR - Nous déclarons sous notre propre responsabilité que le produit répond aux directives.

HU - Kizárolagos felelősséggünk tudatában kijelentjük, hogy ez a termék megfelel az Európai Unió fentnevezett irányelveinek.

IT - Noi dichiariamo sotto la nostra esclusiva responsabilità che il prodotto è conforme alle direttive citate

NL - Wij verklaaren geheel onder eigen verantwoordelijkheid dat het product voldoet aan de gestelde richtlijnen.

PL - Z pełną odpowiedzialnością oświadczamy, że produkt odpowiada postanowieniom wymienionych dyrektyw.

RO - Declaram pe proprie răspundere că produsul corespunde normelor prevăzute de directive mai sus menționate.

SK - Na výlučnú zodpovednosť vyhlasujeme, že výrobok spĺňa požiadavky uvedených smerníc.

SV - Vi försäkrar att produkten på vårt ansvar är utförd enligt gällande riktlinjer.

US 62 E (JP09812/4)	US 152 ES (JP09436/0)	US 153 ES (JP09247/2)	US 105 D (JP09408)	US 153 E (JP09311)
US 62 E (JP45196)	US 152 DS (JP09438/0)	US 153 DS (JP09249/3)	US 105 DS (JP09409)	US 153 D (JP09302)
US 62 ES (JP09814/4)	US 73 E (JP00676/12)	US 75 E (JP09406)	US 155 ES (JP09389)	US 155 E (JP09388)
US 62 D (JP09813/4)	US 73 ES (JP00678/12)	US 75 E (JP45197)	US 155 DS (JP09391)	US 155 D (JP09390)
US 62 DS (JP09815/4)	US 73 D (JP00677/12)	US 75 ES (JP09407)	US 151 ES (JP09241/1)	US 251 D (JP09301)
US 102 E (JP09278/0)	US 73 DS (JP00679/12)	US 75 D (JP09404)	US 151 DS (JP09243/2)	US 251 DS (JP09245/2)
US 102 E (JP45693)	US 103 E (JP09280)	US 75 DS (JP09405)	US 151 D (JP09300)	US 253 DS (JP09251/2)
US 102 ES (JP09279/1)	US 103 ES (JP09281/1)	US 105 E (JP09410)	US 151 E (JP09310)	US 253 D (JP09303)
US 102 D (JP00214/10)	US 103 D (JP09258/1)	US 105 E (JP45198)	US 152 E (JP09435)	
US 102 DS (JP00218/10)	US 103 DS (JP09259/1)	US 105 ES (JP09411)	US 152 E (JP09437)	

DE - Weitere normative Dokumente CS - Jinými normativními dokumenty DA - Andre normative dokumenter EN - Other normative documents FI - Muiden normien FR - Autres documents normatifs HU - Egyéb szabályozó dokumentumokban leírtaknak IT - Altri documenti normativi NL - Verdere normatieve documenten PL - Innymi dokumentami normatywnymi RO - Alte acte normative SK - Iným záväzným dokumentom SV - Vidare normerande dokument:

EN 60335-2-41: 2021/A11:2021

DE - Bevollmächtigter für technische Dokumentation CS - Oprávněná osoba pro technickou dokumentaci DA - Autoriseret person for teknisk dokumentasjon EN - Authorized person for technical documentation FI - Valtuuttetu henkilö tekninen dokumentaatio FR - Personne autorisée à la documentation technique HU - Hivatalos személy műszaki dokumentáció IT - Persona abilitata per la documentazione tecnica NL - Bevoegd persoon voor technische documentatie PL - Pełnomocnik ds. dokumentacji technicznej RO - Persoană autorizată pentru documentație tehnică SK - Oprávnena osoba pre technickú dokumentáciu SV - Auktoriseraad person för teknisk dokumentation:

JUNG PUMPEN - Stefan Sirges - Industriestr. 4-6 - 33803 Steinhagen

Steinhagen, 19-12-2022

Stefan Sirges, General Manager
i.V. Pascal Kökebeck, Sales Manager

**EU-Konformitätserklärung**

EU-Prohlášení o shodě

EU-Overensstemmelseserklæring

EU-Declaration of Conformity

EU-Vaatimustenmukaisuusvakuutus

EU-Déclaration de Conformité

EU-Megfelelőségi nyilatkozat

EU-Dichiarazione di conformità

EU-Conformiteitsverklaring

EU-Deklaracija zgodnosti

EU-Declaratie de conformitate

EU-Vyhľásenie o zhode

EU-Försäkran om överensstämmelse

DE - Richtlinien - Harmonisierte Normen

CS - Směrnice - Harmonizované normy

DA - Direktiv - Harmoniseret standard

EN - Directives - Harmonised standards

FI - Direktiivi - Yhdenmukaistettu standardi

FR - Directives - Normes harmonisées

HU - Irányelv - Harmonizá szabványok

IT - Direttive - Norme armonizzate

NL - Richtlijnen - Geharmoniseerde normen

PL - Dyrektywy - Normy zharmonizowane

RO - Directivă - Norme coroborate

SK - Smernice - Harmonizované normy

SV - Direktiv - Harmoniserade normer

• 2006/42/EG (MD) EN 809:1998/AC:2010, EN ISO 12100:2010

• 2011/65/EU (RoHS)

• 2014/30/EU (EMC)

EN 55014-1:2006/A2:2011, EN 55014-2:1997/A2:2008, EN 60034-1:2010,

EN 61000-3-2:2014, EN 61000-3-3:2013

JUNG PUMPEN GmbH - Industriestr. 4-6 - 33803 Steinhagen - Germany - www.jung-pumpen.de

DE - Wir erklären in alleiniger Verantwortung, dass das Produkt den aufgeführten Richtlinien entspricht.

CS - Prohlašujeme na svou výlučnou odpovědnost, že výrobek odpovídá jmenovaným směrnicím.

DA - Vi erklærer under ansvar at produktet i overensstemmelse med de retningslinjer

EN - We hereby declare, under our sole responsibility, that the product is in accordance with the specified Directives.

FI - Me vakuutamme omalla vastuullamme, että tuote täyttää ohjeita.

FR - Nous déclarons sous notre propre responsabilité que le produit répond aux directives.

HU - Kizárolagos felelősséggünk tudatában kijelentjük, hogy ez a termék megfelel az Európai Unió fentnevezett irányelveinek.

IT - Noi dichiariamo sotto la nostra esclusiva responsabilità che il prodotto è conforme alle direttive citate

NL - Wij verklaren geheel onder eigen verantwoordelijkheid dat het product voldoet aan de gestelde richtlijnen.

PL - Z pełną odpowiedzialnością oświadczamy, że produkt odpowiada postanowieniom wymienionych dyrektyw.

RO - Declaram pe proprie răspundere că produsul corespunde normelor prevăzute de directive mai sus menționate.

SK - Na výlučnú zodpovednosť vyhlasujeme, že výrobok spĺňa požiadavky uvedených smerníc.

SV - Vi försäkrar att produkten på vårt ansvar är utförd enligt gällande riktlinjer.

US 73 HE (JP09267/1)**US 73 HES (JP09264/1)****US 103 HE (JP09307)****US 103 HES (JP09308)**

DE - Weitere normative Dokumente CS - Jinými normativními dokumenty DA - Andre normative dokumenter EN - Other normative documents FI - Muiden normien FR - Autres documents normatifs HU - Egyéb szabályozó dokumentumokban leírtaknak IT - Altri documenti normativi NL - Verdere normatieve documenten PL - Innymi dokumentami normatywnymi RO - Alte acte normative SK - Iným záväzným dokumentom SV - Vidare normerande dokument:

EN 62233:2008/AC:2008

DE - Bevollmächtigter für technische Dokumentation CS - Oprávněná osoba pro technickou dokumentaci DA - Autoriseret person for teknisk dokumentation EN - Authorized person for technical documentation FI - Valtutettu henkilö tekninen dokumentaatio FR - Personne autorisée à la documentation technique HU - Hivatalos személy műszaki dokumentáció IT - Persona abilitata per la documentazione tecnica NL - Bevoegd persoon voor technische documentatie PL - Pełnomocnik ds. dokumentacji technicznej RO - Persoană autorizată pentru documentație tehnică SK - Oprávnená osoba pre technickú dokumentáciu SV - Auktoriseraad person för teknisk dokumentation:

JUNG PUMPEN - Stefan Sirges - Industriestr. 4-6 - 33803 Steinhagen

Steinhagen, 20-02-2019

Stefan Sirges, General Manager

i.V.
Pascal Kölkebeck, Sales Manager

CE 0197	
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany 13 402.12.2011 / 403.12.2011	
EN 12050-2:2001 Abwasserhebeanlage für fäkalienfreies Abwasser	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1) US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
US 153 E (JP09311/1)	US 151 E (JP09310/0) US 151 ES (JP09241/1)
US 153 ES (JP09247/2)	US 151 D (JP09300/0)
US 153 D (JP09302/1)	US 151 DS (JP09243/2)
US 153 ES (JP09249/3)	US 251 D (JP09301/0) US 251 DS (JP09245/2)
US 75 E (JP09406)	US 253 D (JP09303)
US 75 E (JP45197)	US 253 DS (JP09251/2)
US 75 ES (JP09407)	
Sammeln und automatisches Heben von fäkalienfreiem Abwasser innerhalb und außerhalb von Gebäuden über die Rückstaubene	

CE 0197	
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany 13 402.12.2011 / 403.12.2011	
EN 12050-2:2001 Lifting plant for faecal-free wastewater	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1) US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	US 103 DS (JP09259/1)
US 153 E (JP09311/1)	US 151 E (JP09310/0) US 151 ES (JP09241/1)
US 153 ES (JP09247/2)	US 151 D (JP09300/0)
US 153 D (JP09302/1)	US 151 DS (JP09243/2)
US 153 ES (JP09249/3)	US 251 D (JP09301/0) US 251 DS (JP09245/2)
US 75 E (JP09406)	US 253 D (JP09303)
US 75 E (JP45197)	US 253 DS (JP09251/2)
US 75 ES (JP09407)	
Collecting and automatically lifting faecal-free waste water above the backflow level in buildings and sites	

BRANDVERHALTEN	NPD
WASSERDICHTHEIT	Bestanden
WIRKSAMKEIT (HEBEWIRKUNG)	
- Förderung von Feststoffen	Bestanden
- Rohrabschlüsse	Bestanden
- Lüftung	NPD
- Mindestfließgeschwindigkeit	Bestanden
- Freier Mindestdurchgang der Anlage	Bestanden
- Mindestnutzvolumen	NPD
MECHANISCHE FESTIGKEIT	
- Tragfähigkeit und strukturelle Stabilität des Sammelbehälters für die Verwendung außerhalb von Gebäuden	NPD
- Strukturelle Stabilität des Sammelbehälters für die Verwendung innerhalb von Gebäuden	NPD
GERÄUSCHPEGEL	70 dB(A)
DAUERHAFTIGKEIT	
- der Wasserdichtheit und Luftdichtheit	Bestanden
- der Hebewirkung	Bestanden
- der mechanischen Festigkeit	Bestanden
GEFÄHRLICHE SUBSTANZEN	NPD

REACTION TO FIRE	NPD
WATERTIGHTNESS	Pass
EFFECTIVENESS (LIFTING EFFECTIVENESS)	
- Pumping of solids	Pass
- Pipe connections	Pass
- Ventilation	NPD
- Minimum flow velocity	Pass
- Minimum free passage of the plant	Pass
- Minimum useful volume	NPD
MECHANICAL RESISTANCE	
- Load bearing capacity and structural stability of collection tank for use outside buildings	NPD
- Structural stability of collection tank for use inside buildings	NPD
NOISE LEVEL	70 dB(A)
DURABILITY	
- of structural stability	Pass
- of lifting effectiveness	Pass
- of mechanical resistance	Pass
DANGEROUS SUBSTANCES	NPD

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Station de relevage pour effluents exempts de matières fécales DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1)
	US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
US 153 E (JP09311/1)	US 151 E (JP09310/0)
US 153 ES (JP09247/2)	US 151 ES (JP09241/1)
US 153 D (JP09302/1)	US 151 D (JP09300/0)
US 153 ES (JP09249/3)	US 151 DS (JP09243/2)
US 75 E (JP09406)	US 251 D (JP09301/0)
US 75 E (JP45197)	US 251 DS (JP09245/2)
US 75 ES (JP09407)	
Collecte et relevage des eaux usées exemptes de matières fécales à l'intérieur et à l'extérieur des bâtiments au-dessus du niveau de refoulement	

RÉACTION AU FEU	NPD
ÉTANCHÉITÉ À L'EAU	satisfaisant
EFFICACITÉ (PERFORMANCE DE RELEVAGE)	
- Refoulement de matières solides	
- Raccords de tuyaux	satisfaisant
- Aération	NPD
- Débit minimum	satisfaisant
- Passage libre minimal de l'installation	satisfaisant
- Volume utile minimal	NPD
RÉSISTANCE MÉCANIQUE	
- Capacité de charge et stabilité structurelle du collecteur pour une utilisation à l'extérieur des bâtiments	NPD
- Stabilité structurelle du collecteur pour une utilisation à l'intérieur des bâtiments	NPD
NIVEAU SONORE	70 dB(A)
RÉSISTANCE	
- de la stabilité structurelle	satisfaisant
- de la performance de relevage	satisfaisant
- de la résistance mécanique	satisfaisant
SUBSTANCES DANGEREUSES	NPD

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Afvalwaterpompinstallatie voor afvalwater zonder fecaliën DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1)
	US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
US 153 E (JP09311/1)	US 151 E (JP09310/0)
US 153 ES (JP09247/2)	US 151 ES (JP09241/1)
US 153 D (JP09302/1)	US 151 D (JP09300/0)
US 153 ES (JP09249/3)	US 151 DS (JP09243/2)
US 75 E (JP09406)	US 251 D (JP09301/0)
US 75 E (JP45197)	US 251 DS (JP09245/2)
US 75 ES (JP09407)	
Verzamelen en automatisch pompen van afvalwater zonder fecaliën binnen en buiten gebouwen boven het terugstuwniveau	

BRANDGEDRAG	NPD
WATERDICHTHEID	succesvol
RENDEMENT (POMPWERKING)	
- Transport van vaste stoffen	
- Buisaansluitingen	succesvol
- Verluchtingsleidingen	succesvol
- Minimum doorstromingssnelheid	NPD
- Minimum vrije doorgang van de installatie	succesvol
- Minimum nuttig volume	succesvol
MECHANISCHE VASTHEID	
- Draagkracht en structurele stabiliteit van de verzamel-containert voor het gebruik buiten gebouwen	
- Structurele stabiliteit van de verzamelcontainer voor het gebruik binnin gebouwen	NPD
GELUIDSNIVEAU	
DUURZAAMHEID	
- van de structurele stabiliteit	
- van de pompwerking	succesvol
- van de mechanische vastheid	succesvol
GEVAARLIJKE STOFFEN	NPD

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Stazione di sollevamento per acque di scarico prive di sostanze fecali DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1)
	US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
US 153 E (JP09311/1)	US 151 E (JP09310/0)
US 153 ES (JP09247/2)	US 151 ES (JP09241/1)
US 153 D (JP09302/1)	US 151 D (JP09300/0)
US 153 ES (JP09249/3)	US 151 DS (JP09243/2)
US 75 E (JP09406)	US 251 D (JP09301/0)
US 75 E (JP45197)	US 251 DS (JP09245/2)
US 75 ES (JP09407)	
Raccolta e sollevamento automatico di acque reflue prive di sostanze fecali all'interno o all'esterno di edifici sopra il livello di ristagno	

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Instalacja przepompowni ścieków dla ścieków fekalnych DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1)
	US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
US 153 E (JP09311/1)	US 151 E (JP09310/0)
US 153 ES (JP09247/2)	US 151 ES (JP09241/1)
US 153 D (JP09302/1)	US 151 D (JP09300/0)
US 153 ES (JP09249/3)	US 151 DS (JP09243/2)
US 75 E (JP09406)	US 251 D (JP09301/0)
US 75 E (JP45197)	US 251 DS (JP09245/2)
US 75 ES (JP09407)	
Zbieranie i automatyczne przepompowywanie ścieków fekalnych wewnętrz budynków i poza nimi powyżej poziomu cokoli	

INFIAMMABILITÀ	NPD
IMPERMEABILITÀ	Superata
EFFICACIA (CAPACITÀ DI SOLLEVAMENTO)	
- Pompaaggio di materiali solidi	Superata
- Collegamenti al tubo	Superata
- Ventilazione	NPD
- Velocità di scorrimento minima	Superata
- Passaggio libero minimo dell'impianto	Superata
- Volume utile minimo	NPD
RESISTENZA MECCANICA	
- Capacità di carico e stabilità strutturale del serbatoio di raccolta per l'uso al di fuori degli edifici	NPD
- Stabilità strutturale del serbatoio di raccolta per l'uso all'interno degli edifici.	NPD
SOGLIA DI RUMOROSITÀ	70 dB(A)
DUREVOLEZZA	
- della stabilità strutturale	Superata
- della capacità di sollevamento	Superata
- della resistenza meccanica	Superata
SOSTANZE PERICOLOSE	NPD

WŁAŚCIWOŚCI OGNIOWE	NPD
SZCZELNOŚĆ WODNA	Pozzywne
SPRAWNOŚĆ DZIAŁANIA (SKUTECZNOŚĆ TŁOCZENIA)	
- Tłoczenie substancji stałych	Pozzywne
- Przyłącza rurowe	Pozzywne
- Wentylacja	NPD
- Minimalna prędkość przepływu	Pozzywne
- Minimalna, swobodna przepustowość instalacji	Pozzywne
- Minimalna objętość użytkowa	NPD
WYTRZYMAŁOŚĆ MECHANICZNA	
- Nośność i stabilność konstrukcyjna zbiornika podczas stosowania poza budynkami	NPD
- Nośność i stabilność konstrukcyjna zbiornika podczas stosowania w budynkach	NPD
POZIOM HAŁASU	70 dB(A)
TRWAŁOŚĆ I WYTRZYMAŁOŚĆ	
- stabilność konstrukcyjna	Pozzywne
- skuteczność tłoczenia	Pozzywne
- wytrzymałość mechaniczna	Pozzywne
SUBSTANCJE NIEBEZPIECZNE	NPD

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Čerpací stanice odpadních vod bez fekálíí DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1)
	US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
	US 151 E (JP09310/0)
US 153 E (JP09311/1)	US 151 ES (JP09241/1)
US 153 ES (JP09247/2)	US 151 D (JP09300/0)
US 153 D (JP09302/1)	US 151 DS (JP09243/2)
US 153 ES (JP09249/3)	US 251 D (JP09301/0)
	US 251 DS (JP09245/2)
US 75 E (JP09406)	US 253 D (JP09303)
US 75 E (JP45197)	US 253 DS (JP09251/2)
US 75 ES (JP09407)	
Sběr a automatické čerpání odpadních vod s fekáliemi uvnitř a mimo budov nad úroveň zpětného vzdutí	

CHOVÁNÍ PŘI POŽÁRU	NPD
VODOTĚSNOST	vyhovuje
ÚČINNOST (ZDVÍH)	
- Doprava pevných látek	vyhovuje
- Potrubní přípojky	vyhovuje
- Větrání	NPD
- Minimální průtoková rychlosť	vyhovuje
- Volný minimální prostup zařízení	vyhovuje
- Minimální užitný objem	NPD
MECHANICKÁ PEVNOST	NPD
- Nosnost a strukturální stabilita sběrné nádrže pro použití mimo budovy	
- Strukturální stabilita sběrné nádrže pro použití uvnitř budov	NPD
HLUČNOST	70 dB(A)
STÁLOST	
- Strukturální stability	vyhovuje
- Zdvihu	vyhovuje
- Mechanické pevnosti	vyhovuje
NEBEZPEČNÉ SUBSTANCE	NPD

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Čerpacie stanice odpadových vod bez fekálnych splaškov DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1)
	US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E (JP00676/12)
US 103 E (JP09280/0)	US 103 E (JP09280/0)
US 103 ES (JP09281/1)	US 103 ES (JP09281/1)
US 103 D (JP09258/1)	US 103 D (JP09258/1)
US 103 DS (JP09259/1)	US 103 DS (JP09259/1)
	US 151 E (JP09310/0)
US 153 E (JP09311/1)	US 151 ES (JP09241/1)
US 153 ES (JP09247/2)	US 151 D (JP09300/0)
US 153 D (JP09302/1)	US 151 DS (JP09243/2)
US 153 ES (JP09249/3)	US 251 D (JP09301/0)
	US 251 DS (JP09245/2)
US 75 E (JP09406)	US 253 D (JP09303)
US 75 E (JP45197)	US 253 DS (JP09251/2)
US 75 ES (JP09407)	
Zber a automatické čerpanie odpadových vod bez fekálnych splaškov v interiéroch a exteriéroch budov prostredníctvom úrovne vzdutia	


REAKCIA POČAS POŽÁRU	NPD
VODOTESNOSŤ	v poriadku
ÚČINNOSŤ (ÚČINOK SANIA)	
- Doprava pevných častí	v poriadku
- Potrubné pripojky	v poriadku
- Vetranie	NPD
- Minimálna rýchlosť prietoku	v poriadku
- Voľný minimálny priechod systému	v poriadku
- Minimálny užitkový objem	NPD
MECHANICKÁ PEVNOSŤ	
- Nosnosť a štruktúrna stabilita zbernej nádoby pre používanie mimo budovy	NPD
- Štruktúrna stabilita zbernej nádoby pre používanie v rámci budov	NPD
HLADINA HLUKU	70 dB(A)
TRVANLIVOSŤ	
- Štrukturálnej stability	v poriadku
- Vedľajších účinkov	v poriadku
- Mechanickej pevnosti	v poriadku
NEBEZPEČNÉ LÁTKY	NPD

CE	0197
JUNG PUMPEN GmbH - Industriestr. 4-6 33803 Steinhagen, Germany	
13	
402.12.2011 / 403.12.2011	
EN 12050-2:2001	
Fekáliamentes szennyvizek átemelői DN 32	
US 62 E (JP09812/4)	US 75 D (JP09404)
US 62 E (JP45196)	US 75 DS (JP09405)
US 62 ES (JP09814/4)	US 105 E (JP09410)
US 62 D (JP09813/4)	US 105 ES (JP09411)
US 62 DS (JP09815/4)	US 105 E (JP45198)
US 102 E (JP09278/0)	US 105 D (JP09408)
US 102 ES (JP09279/1)	US 105 DS (JP09409)
US 102 D (JP00214/10)	US 155 E (JP09388)
US 102 DS (JP00218/10)	US 155 ES (JP09389)
US 152 E (JP09435/0)	US 155 D (JP09390)
US 152 ES (JP09436/0)	US 155 DS (JP09391)
US 152 D (JP09437/0)	
US 152 ES (JP09438/0)	US 73 HE (JP09267/1) US 73 HES (JP09264/1)
US 73 E (JP00676/12)	US 103 HE (JP09307/0)
US 73 ES (JP00678/12)	US 103 HES (JP09308/0)
US 73 D (JP00677/12)	
US 73 DS (JP00679/12)	US 73 E, Ex (JP09292)
US 103 E (JP09280/0)	US 103 E, Ex (JP09294)
US 103 ES (JP09281/1)	US 73 D, Ex (JP00595/2)
US 103 D (JP09258/1)	US 103 D, Ex (JP09293)
US 103 DS (JP09259/1)	
US 153 E (JP09311/1)	US 151 E (JP09310/0) US 151 ES (JP09241/1)
US 153 ES (JP09247/2)	US 151 D (JP09300/0)
US 153 D (JP09302/1)	US 151 DS (JP09243/2)
US 153 ES (JP09249/3)	US 251 D (JP09301/0) US 251 DS (JP09245/2)
US 75 E (JP09406)	US 253 D (JP09303)
US 75 E (JP45197)	US 253 DS (JP09251/2)
US 75 ES (JP09407)	
Fekáliamentes szennyvíz gyűjtése és emelése épületeken belül és kívül a visszatorlódási szint felett	

VISELKEDÉS TŰZ ESETÉN	NPD
VÍZÁLLÓSÁG	Megfelelt
HATÉKONYSÁG (EMELŐ HATÁS)	
- Szilárd anyagok szállítása	Megfelelt
- Csőcsatlakozások	Megfelelt
- Szellőzés	NPD
- Az áramlás minimális sebessége	Megfelelt
- A berendezés szabad, minimális áteresztése	Megfelelt
- Minimális hasznos volumen	NPD
MECHANIKAI SZILÁRDSÁG	
- A gyűjtőtartály terhelhetősége és strukturális stabilitása épületeken kívüli használathoz	NPD
- A gyűjtőtartály strukturális stabilitása épületeken belüli használathoz	NPD
ZAJSZINT	70 dB(A)
TARTÓSSÁG	
- a strukturális stabilitás tartóssága	Megfelelt
- az emelőhatás tartóssága	Megfelelt
- a mechanikai szilárdság tartóssága	Megfelelt
VESZÉLYES ANYAGOK	NPD


**TECHNISCHE DATEN • TECHNICAL DATA • CARACTÉRISTIQUES TECHNIQUES • TECHNISCHE
GEGEVENS • DATI TECNICI • DANE TECHNICZNE • TECHNICKÉ ÚDAJE • MŰSZAKI ADATOK**

DIMENSIONS (mm)

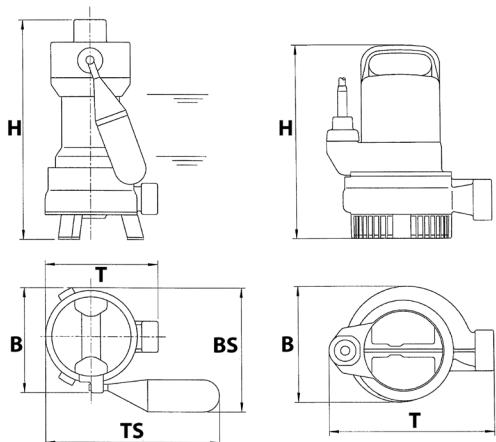


	H	B	T	H	BS	TS	H	BS	BT
US 62	380	190	210	380	225	325	380	255	280
US 73	380	195	210	380	230	325	380	255	280
US 75	395	200	230	395	240	335	395	205	290
US 102	410	190	210	410	225	325	410	255	280
US 103	410	195	210	410	230	325	410	255	280
US 105	425	200	230	425	240	335	425	265	290
US 152	435	190	210	435	225	325	435	255	280
US 153	435	190	210	435	225	325	435	255	280
US 155	450	200	230	450	240	335	450	205	290
US 151	360	220	310						
US 251	360	220	310						
US 253	400	190	280						

ON - OFF (mm)

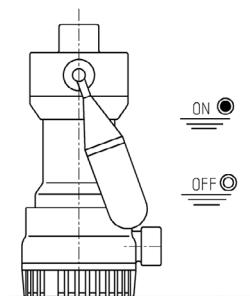

	ON	OFF	ON	OFF
US 62, US 73	240	125	155	105
US 75	255	140	170	120
US 102, US 103	270	155	185	135
US 105	285	170	200	150
US 152, US 153	295	180	210	160
US 155	310	195	225	175

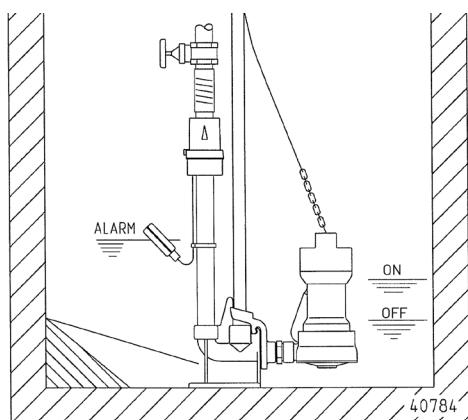

	ON	OFF	ALARM
US 62, US 73	265	150	> 385
US 102, US 103	295	180	> 415
US 75	260	145	> 380
US 105	290	175	> 410
US 155	315	200	> 435
US 152, US 153	320	205	> 440
US 151, US 251	> 270	> 120	> 370
US 253	> 270	> 120	> 370


	US 62 E / ES US 73 E / HE / ES / HES	US 62 D / DS US 73 D / DS	US 102 E / ES US 103 E / HE / ES / HES	US 102 D / DS US 103 D / DS
[kg]	12,6 / 12,7 12,4 / 12,4 / 12,5 / 12,5	12,8 / 12,9 12,6 / 12,7	14,3 / 14,4 14,0 / 14,0 / 14,1 / 14,1	14,3 / 14,4 14,6 / 14,7
 DN [mm]	DN 10 / 30	DN 10 / 30	DN 10 / 30	DN 10 / 30
S2 / S3*	8 min / 10 %	8 min / 10 %	8 min / 10 %.	15 min / 15 %
P1 [kW]	0,83	0,85	1,37	1,36
P2 [kW]	0,50	0,60	0,98	1,06
U [V]	1/N/PE ~230	3/PE ~400	1/N/PE ~230	3/PE ~400
f [Hz]	50	50	50	50
I [A]	3,9	1,4	6,0	2,4
	US 75 E / ES	US 75 D / DS	US 105 E / ES	US 105 D / DS
[kg]	12,9 / 13,0	13,1 / 13,2	14,5 / 14,6	15,1 / 15,2
 DN [mm]	DN 50	DN 50	DN 50	DN 50
S2 / S3*	8 min / 10 %	8 min / 10 %	8 min / 10 %.	15 min / 15 %
P1 [kW]	0,83	0,85	1,37	1,36
P2 [kW]	0,50	0,60	0,98	1,06
U [V]	1/N/PE ~230	3/PE ~400	1/N/PE ~230	3/PE ~400
f [Hz]	50	50	50	50
I [A]	3,9	1,4	6,0	2,4
	US 151 E / ES	US 151 D / DS	US 152 E / ES US 153 E / ES	US 152 D / DS US 153 D / DS
[kg]	12,6 / 12,7 12,4 / 12,5 / 12,4 / 12,5	12,8 / 12,9 12,6 / 12,7	14,3 / 14,4 14,0 / 14,1 / 14,0 / 14,1	14,3 / 14,4 14,6 / 14,7
 DN [mm]	DN 10	DN 10	DN 10 / 30	DN 10 / 30
S2 / S3*	20 min / 25 %	25 min / 40 %	12 min / 10 %	15 min 10 %
P1 [kW]	1,68	1,60	1,60	1,70
P2 [kW]	1,19	1,30	1,21	1,41
U [V]	1/N/PE ~230	3/N/PE ~400	1/N/PE ~230	3/N/PE ~400
f [Hz]	50	50	50	50
I [A]	7,6	3,0	7,5	3,1
	US 155 E / ES	US 155 D / DS	US 251 D / DS	US 253 D / DS
m [kg]	16,0 / 16,3	16,5 / 17,2	27,5 / 29,5	26,5 / 28,0
 DN [mm]	DN 50	DN 50	DN 10	DN 40
S2 / S3*	12 min / 10 %	15 min / 10 %	15 min / 25 %	15 min / 25 %
P1 [kW]	1,60	1,70	2,60	2,60
P2 [kW]	2,21	1,41	2,10	2,10
U [V]	1/N/PE ~230	3/PE ~400	3/N/PE ~400	3/N/PE ~400
f [Hz]	50	50	50	50
I [A]	7,5	3,1	4,4	4,4

* Beispiel: 20% = 2 min Betrieb + 8 min Pause (Zyklusdauer 10 min) * Example for 40%: 4 min. operation and 6 min. rest (Cycle duration 10 min.) * Exemple: 40% = 4 min de service et 6 min de pause (Durée du jeu 10 min) * Esempio: 20%: 2 min. di funzionamento + 8 min. di pausa(durata del ciclo 10 min.) * Przykładowo 40%: 4 min pracy i 6 min przerwy (Czas cyklu 10 min) * Příklad 40%: 4 min. provoz a 6 min. přestávka (trvání pracovního cyklu 10 min.) * Príklad 40%: 4 min prevádzka a 6 min prestávka (doba trvania cyklu 10 min) * 4 perc üzem és 6 perc szünet (ciklusidő 10 perc)


LEISTUNGEN • PERFORMANCE • PUISSANCES • CAPACITEIT • PRESTAZIONE • WYDAJNOŚCI
 MOCE • VÝKONY • VÝKONY • TELJESÍTMÉNY

H [m]	1	2	3	4	5	6	7	8	9	10	11	12	14	16
	Q [m/h]													
US 62 E / ES	19	17	15	12	10	8	6	4	2					
US 62 D / DS	22	20	17	15	12	10	8	6	4					
US 102 E / ES	28	26	23	21	19	17	15	12	10	8	5	2		
US 102 D / DS	28	26	23	21	19	17	15	12	10	8	5	2		
US 152 E / ES	30	29	27	24	22	20	18	15	13	11	8	6		
US 152 D / DS	31	30	28	26	23	21	19	17	14	12	10	8		
US 73 E / ES	19	17	15	12	10	8	6	4	2					
US 73 HE / HES	19	17	15	12	10	8	6	4	2					
US 73 D / DS	22	20	17	15	12	10	8	6	4					
US 103 E / ES	28	26	23	21	19	17	15	12	10	8	5	2		
US 103 HE / HES	28	26	23	21	19	17	15	12	10	8	5	2		
US 103 D / DS	28	26	23	21	19	17	15	12	10	8	5	2		
US 153 E / ES	30	29	27	24	22	20	18	15	13	11	8	6		
US 153 D / DS	31	30	28	26	23	21	19	17	14	12	10	8		
US 75 E / ES	20	16	13	10	7	4								
US 75 D / DS	23	19	16	12	10	7	3							
US 105 E / ES		28	25	22	19	16	13	10	7	3				
US 105 D / DS		29	26	23	20	17	14	11	8	4				
US 155 E / ES		29	26	22	20	16	14	11	8	2				
US 155 D / DS		31	28	25	21	19	16	13	10	6				
US 151 E / ES	40	39	37	35	33	31	29	26	23	20	17	14		
US 151 D / DS	40	39	37	35	33	31	29	26	23	20	17	14		
US 251 D / DS	54	52	51	49	47	45	43	40	38	35	32	29	21	10
US 253 D / DS	40	38	36	34	32	30	28	25	23	20	17	14	7	


US 62 bis US 105

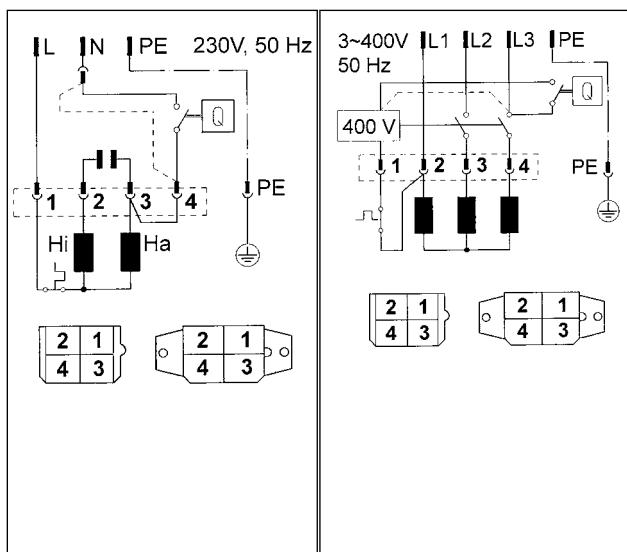


US 151, US 251, US 253 D / DS

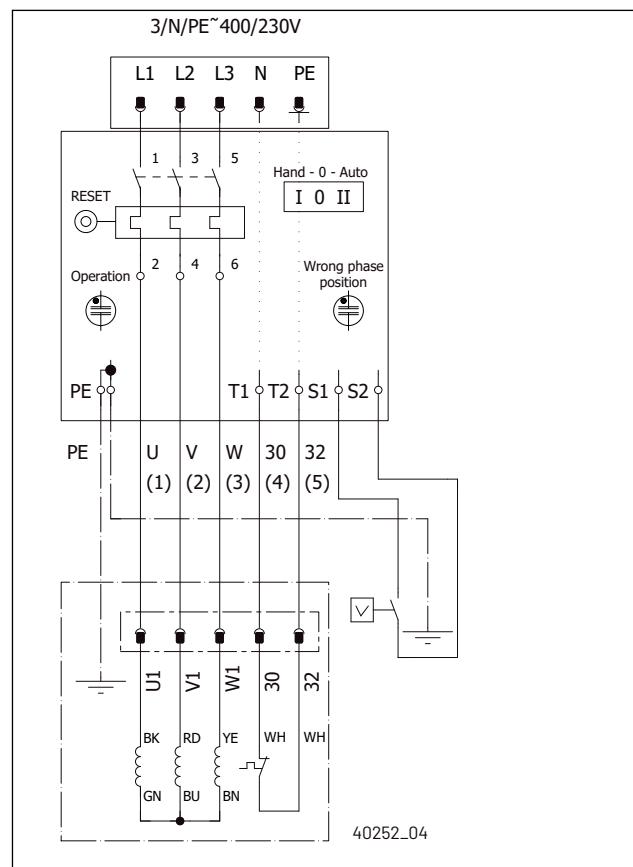


US 151 E / ES

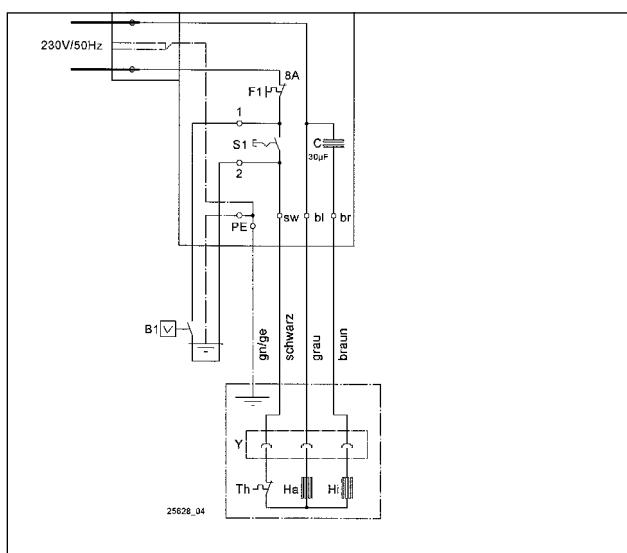


US 152, US 153, US 155 D / DS

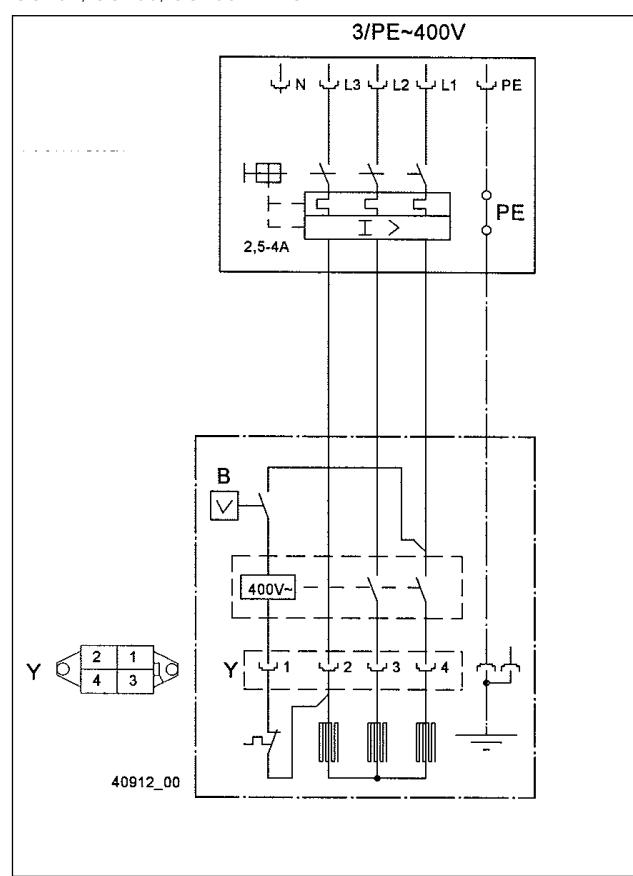

US 152, US 153, US 155 E / ES

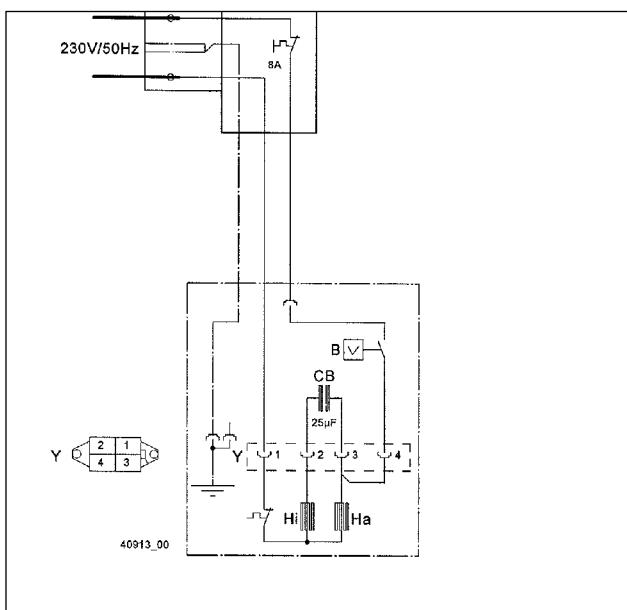


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Pieße de schimb - Запасные части - 备件

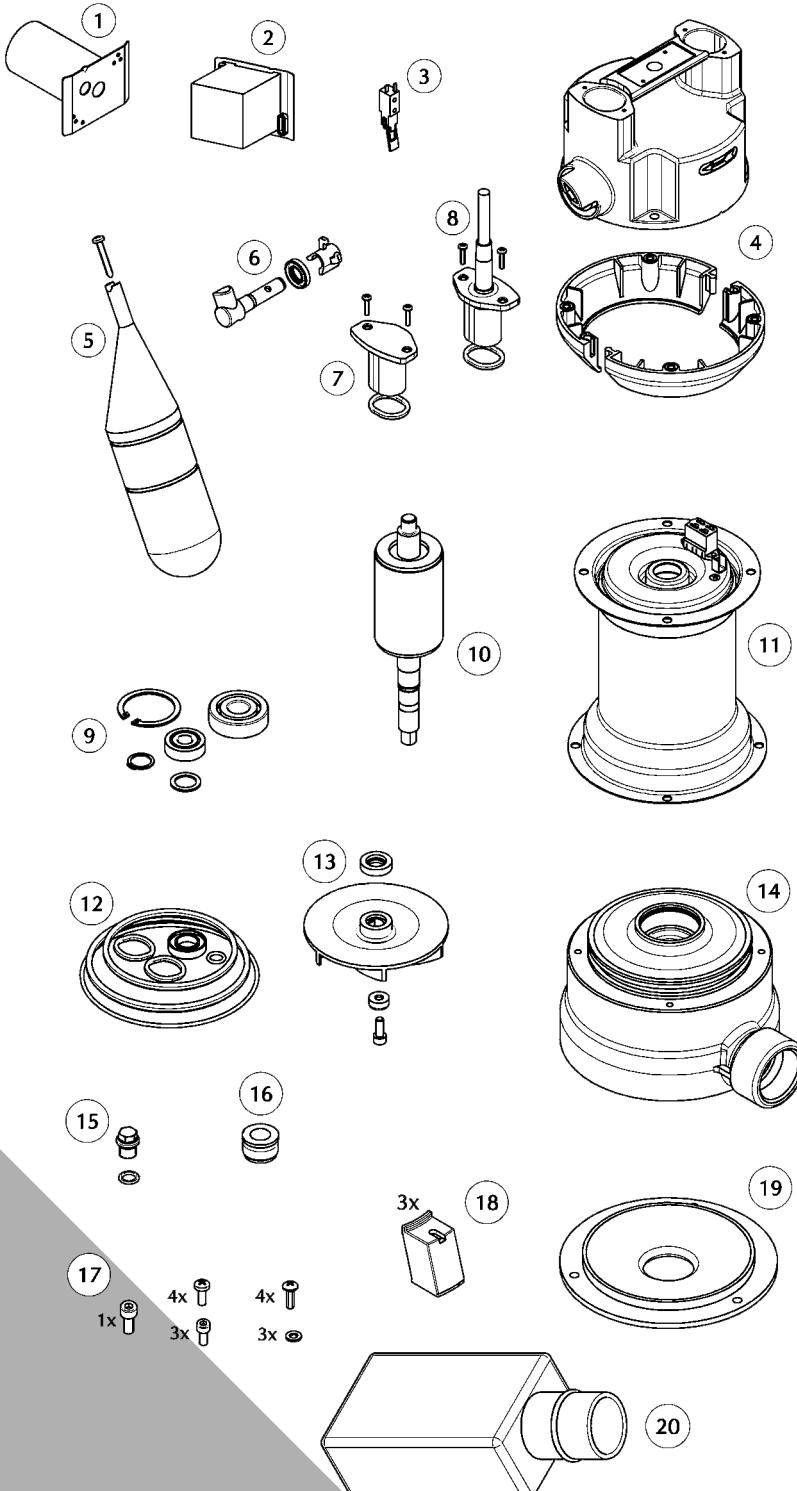


①	Kondensator	Capacitor	
	73		JP46015
	103		JP46016
	153		JP46017
②	Schaltschütz	Contactor	JP46056
③	Mikroschalter	Microswitch	
	ES		JP46351
	DS		JP46352
④	Haube	Top cover	
	ES, DS		JP46018
	E, D		JP46019
⑤	Schwimmer	Float	JP46022
⑥	Schaltwelle	Switch shaft	JP46020
	HE, HES		JP46021
⑦	Schalterpatrone	Switch cartridge	JP46025
⑧	Leitung	Cable	
	73 E/ES, 103 E/ES		JP42777
	73 D/DS, 103 D/DS		JP42779
	73 HE, 103 HE		JP46980
	153 E/ES		JP46013
	153 D/DS		JP46014
	with A/NZ plug ES		JP47221
⑨	Lagersatz	Bearing set	JP46042
⑩	Rotorwelle	Rotor shaft	
	73 E, HE		JP46035
	73 D		JP46036
	103 E, HE		JP46037
	103 D		JP46038
	103 E		JP46039
	153 D		JP46040
⑪	Stator + Gehäuse	Stator + Housing	
	73 E		JP46027
	73 D		JP46028
	73 HE		JP46033
	103 E		JP46029
	103 D		JP46030
	103 HE		JP46034
	153 E		JP46031
	153 D		JP46032
⑫	Dichtungssatz	Seal set	JP46041
⑬	Laufrad	Impeller	
	73		JP46052
	103		JP46053
	153 E		JP46054
	153 D		JP46055
⑭	Pumpengehäuse	Pump casing	JP46044
⑮	Ölschraube	Oil screw	JP46046
⑯	Gleitringdichtung	Mechanical seal	JP46043
⑰	Schraubensatz	Screw set	JP46263
⑱	Füße	Feet	JP46047
	HE		JP46049
⑲	Deckel	Cover	JP46050
⑳	Motorschutz	Motor protection	
	153 ES	Schuko-plug	JP40264
	153 DS	CEE-plug	JP44750
㉑	1l Öl	1l Oil	JP48236

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Pieße de schimb - Запасные части - 备件

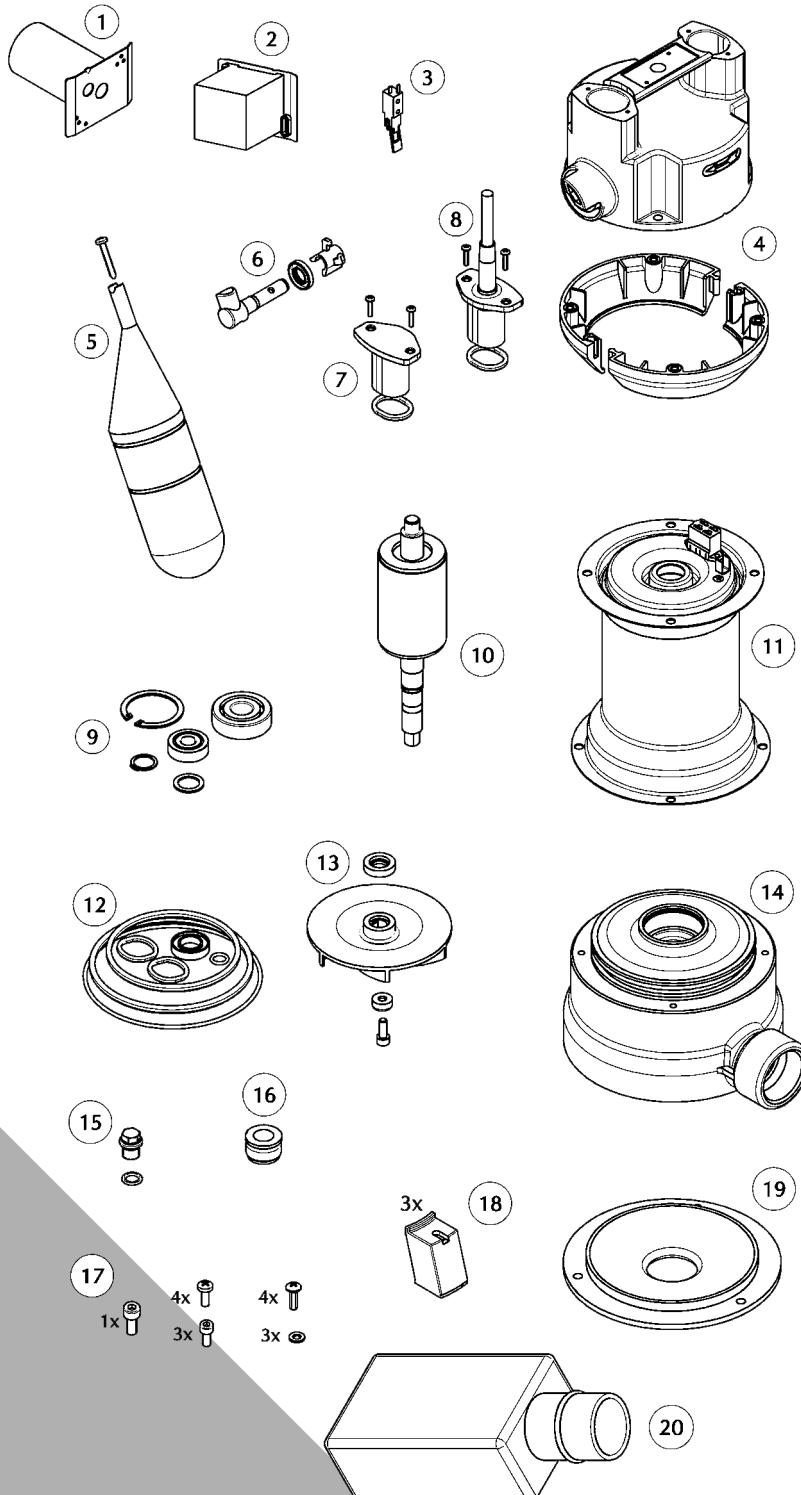


①	Kondensator	Capacitor	
	US 75		JP46015
	US 105		JP46016
	US 155		JP46017
②	Schaltschütz	Contactor	JP46056
③	Mikroschalter ES	Microswitch ES	JP46351
	DS		JP46352
④	Haube	Top cover	
	ES, DS		JP46018
	E, D		JP46019
⑤	Schwimmer	Float	JP46022
⑥	Schaltwelle	Switch shaft	JP46020
⑦	Schalterpatrone	Switch cartridge	JP46025
⑧	Leitung	Cable	
	75 E/ES, 105 E/ES		JP42777
	75 D/DS, 105 D/DS		JP42779
	155 E/ES		JP46013
	155 D/DS		JP46014
	with A/NZ plug, E/ES		JP47221
⑨	Lagersatz	Bearing set	JP46042
⑩	Rotorwelle	Rotor shaft	
	75 E		JP46035
	75 D		JP46036
	105 E		JP46037
	105 D		JP46038
	155 E		JP46039
	155 D		JP46040
⑪	Stator + Gehäuse	Stator + Housing	
	75 E		JP46027
	75 D		JP46028
	105 E		JP46029
	105 D		JP46030
	155 E		JP46031
	155 D		JP46032
⑫	Dichtungssatz	Seal set	JP46041
⑬	Laufrad	Impeller	
	75		JP46052
	105		JP46053
	155 E		JP46054
	155 D		JP46055
⑭	Pumpengehäuse	Pump casing	JP46045
⑮	Ölschraube	Oil screw	JP46046
⑯	Gleitringdichtung	Mechanical seal	JP46043
⑰	Schraubensatz	Screw set	JP46263
⑱	Füße	Feet	JP46047
⑲	Deckel	Cover	JP46051
⑳	Motorschutz	Motor protection	
	155 ES		JP40264
	155 DS		JP44750
㉑	1l Öl	1l Oil	JP48236

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Pieße de schimb - Запасные части - 备件

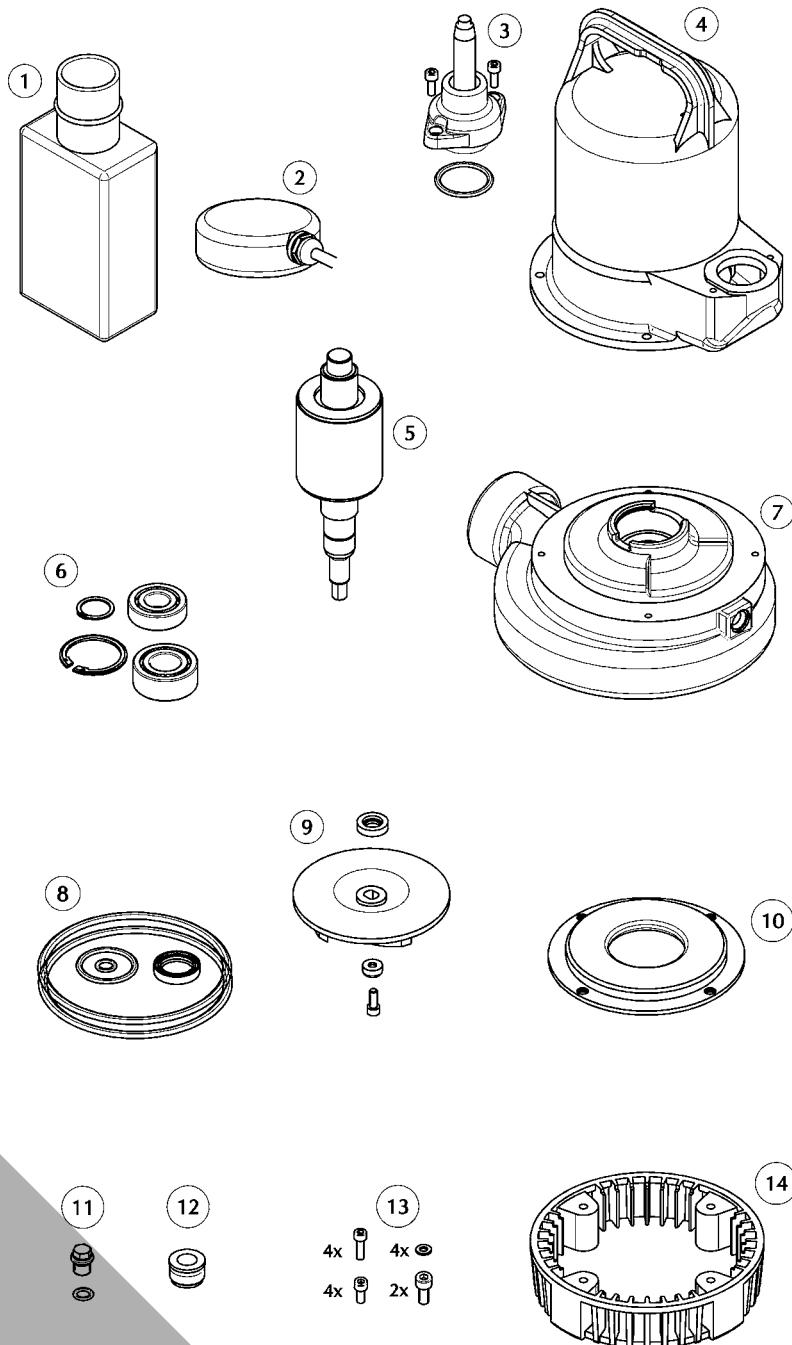


①	Motorschutz	Motor protection	
	151 ES	Schuko-plug	JP40264
	151 DS	CEE-plug	JP44750
	251 DS	CEE-plug	JP44751
②	Schwimmer	Float	JP46266
③	Leitung	Cable	
	E		JP46260
	D		JP46259
④	Stator + Gehäuse	Stator + Housing	
	E		JP46268
	D		JP46267
⑤	Rotorwelle	Rotor shaft	
	E		JP46271
	D		JP46270
⑥	Lagersatz	Bearing set	JP46269
⑦	Pumpengehäuse	Pump casing	JP46277
⑧	Dichtungssatz	Seal set	JP46272
⑨	Laufrad	Impeller	
	151		JP46274
	251		JP46275
⑩	Schleißplatte	Wear plate	JP46273
⑪	Ölschraube	Oil screw	JP46046
⑫	Gleitringdichtung	Mechanical seal	JP46043
⑬	Schraubensatz	Screw set	JP46011
⑭	Siebfuß	Strainer base	JP46276
⑮	1l Öl	1l Oil	JP48236

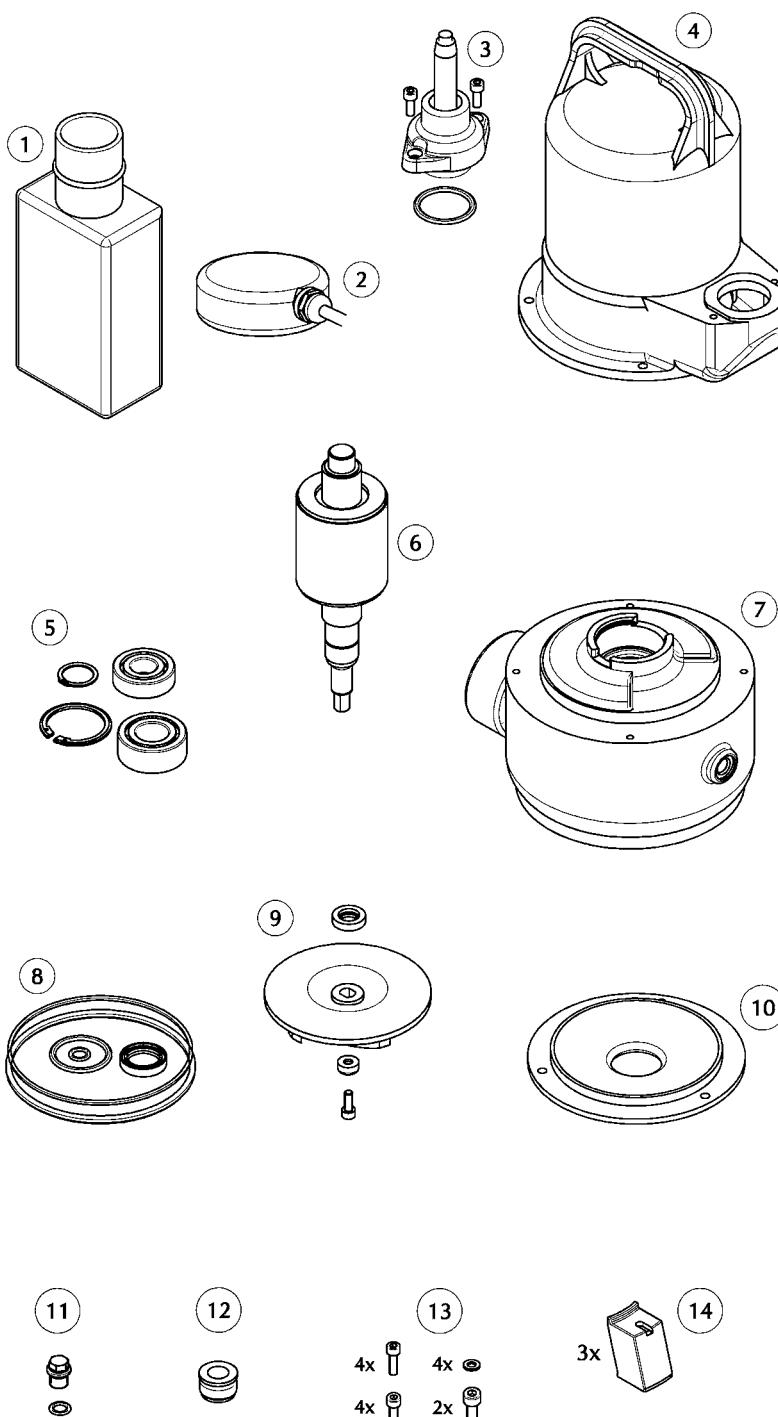

①	CEE Motorschutz	CEE plug	JP44751
②	Schwimmer	Float	JP46266
③	Leitung	Cable	JP46259
④	Stator + Gehäuse	Stator + Housing	JP46267
⑤	Lagersatz	Bearing set	JP46269
⑥	Rotorwelle	Rotor shaft	JP46270
⑦	Pumpengehäuse	Pump casing	JP46279
⑧	Dichtungssatz	Seal set	JP46272
⑨	Laufrad	Impeller	JP46454
⑩	Deckel	Cover	JP46050
⑪	Ölschraube	Oil screw	JP46046
⑫	Gleitringdichtung	Mechanical seal	JP46043
⑬	Schraubensatz	Screw set	JP46011
⑭	Füße	Feet	JP46047
⑮	1l Öl	1l Oil	JP48236

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Pieße de schimb - Запасные части - 备件

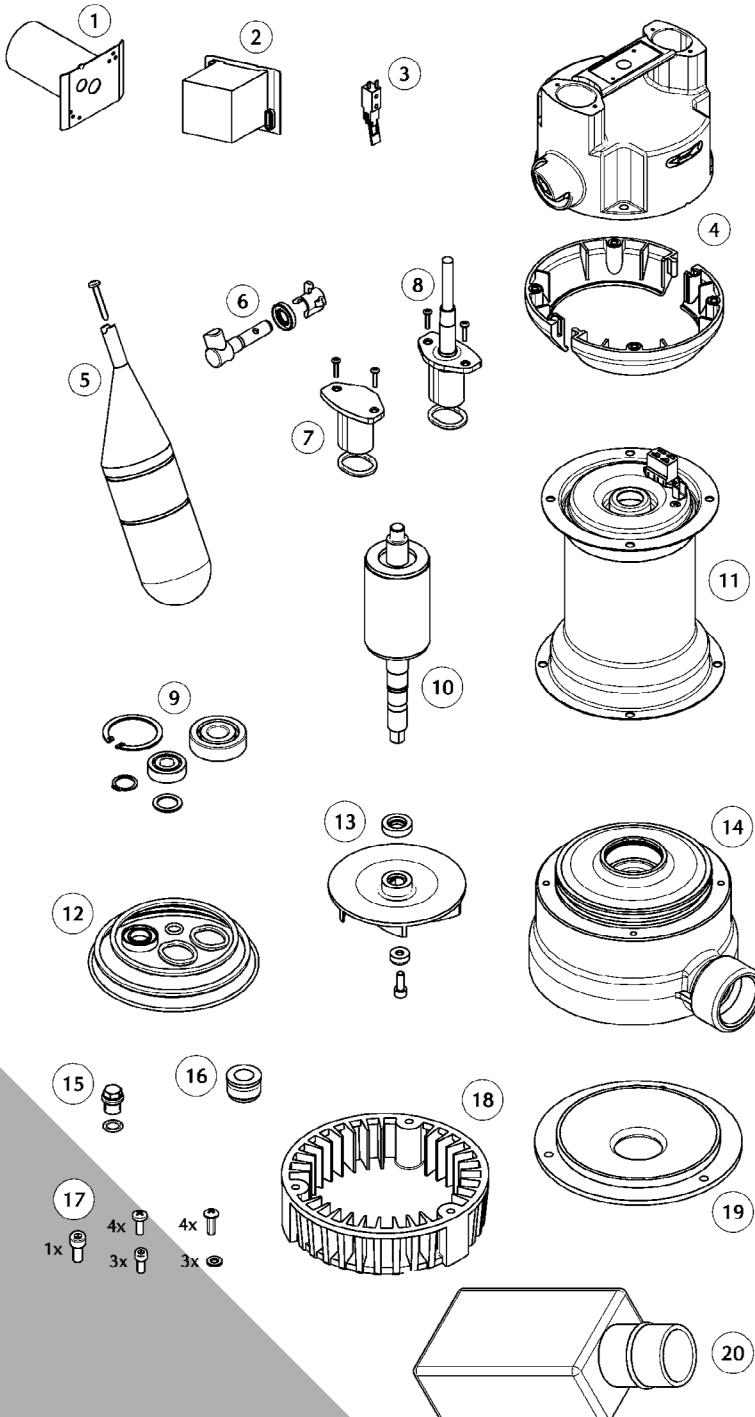

①	Kondensator	Capacitor	
	US 62	JP46015	
	US 102	JP46016	
	US 152	JP46017	
②	Schaltschütz	Contactor	JP46056
③	Mikroschalter	Microswitch	
	ES	JP46351	
	DS	JP46352	
④	Haube	Top cover	
	ES, DS	JP46018	
	E, D	JP46019	
⑤	Schwimmer	Float	JP46022
⑥	Schaltwelle	Switch shaft	JP46020
⑦	Schalterpatrone	Switch cartridge	JP46025
⑧	Leitung	Cable	
	62 E/ES, 102 E/ES	JP42777	
	62 D/DS, 102 D/DS	JP42779	
	152 E/ES	JP46013	
	152 D/DS	JP46014	
	with A/NZ plug ES	JP47221	
⑨	Lagersatz	Bearing set	JP46042
⑩	Rotorwelle	Rotor shaft	
	62 E	JP46035	
	62 D	JP46036	
	102 E	JP46037	
	102 D	JP46038	
	152 E	JP46039	
	152 D	JP46040	
⑪	Stator + Gehäuse	Stator + Housing	
	62 E	JP46027	
	62 D	JP46028	
	102 E	JP46029	
	102 D	JP46030	
	152 E	JP46031	
	152 D	JP46032	
⑫	Dichtungssatz	Seal set	JP46041
⑬	Laufrad	Impeller	
	62	JP46052	
	102	JP46053	
	152 E	JP46054	
	152 D	JP46055	
⑭	Pumpengehäuse	Pump casing	JP46044
⑮	Ölschraube	Oil screw	JP46046
⑯	Gleitringdichtung	Mechanical seal	JP46043
⑰	Schraubensatz	Screw set	JP46263
⑱	Siebfuß	Strainer base	JP46048
⑲	Deckel	Cover	JP46050
⑳	Motorschutz	Motor protection	
	152 ES	Schuko-plug	JP40264
	152 DS	CEE-plug	JP44750
㉑	1l Öl	1l Oil	JP48236



**PUMP TECHNICAL
SERVICES LIMITED**

THE SUBMERSIBLE PUMP SPECIALISTS



Pump House
Unit 12
Bilton Road Industrial Estate
Erith, Kent, DA8 2AN

service@pts-jung.co.uk

sales@pts-jung.co.uk

01322 357 080

pts-jung.co.uk